

OPERATING INSTRUCTIONS FOR ELECTRODE SHARPENING MACHINE WIG 4



Original

Please keep for further use!

CONTENT

EC Declaration or conformity	3
Description of product	4
Directed use	4
Set up	4
Structure & Technical data	5
General safety advise	6
Duty of taking care by the user	6
Starting and operation	7
Change the grinding wheel	8
Maintenance and care	9
Warranty	9
Repairs	9
Spare parts list	10

EC DECLARATION OF CONFORMITY

The manufacturer:

Kaindl-Schleiftechnik
Reiling GmbH
Remchinger Straße 4

75203 Königsbach-Stein
Germany

Herewith declares that the machine
described hereafter:

Grinding machine
Typ: **WIG 4**

Refers to the security and health requirement of
the following EC instructions:

EC-Machine instruction (2006/42/EC)
EC-instruction EMV (2004/108/EC)

Applied harmonised norms:

**EN ISO 12100-1 and EN ISO 12100-2; EN ISO 13857; EN ISO 13732-1;
EN 61029-1, EN 60204 Part 1; EN 61000-6-1; EN 61000-6-2;
EN 61000-6-3; EN 61000-6-4**

**Changes in engineering design, having effect on technical data stated in this
operation manual and directed use, therefore change the character of the
machine substantially make this declaration of conformity invalid.**

These documents had been made up by:

Reinhard Reiling

Kaindl-Schleiftechnik
Reiling GmbH
Remchinger Straße 4
75203 Königsbach-Stein

1. DESCRIPTION OF PRODUCT

The Kaindl electrode grinding machine incl. diamond grinding wheel is ideal for grinding of tungsten carbide welding electrodes diameter **1,0 - 4,0 mm** with a top angle **15° - 180°**.

The centric pointing in longitudinal direction grants a stable arc and a longer lifetime of the tungsten carbide electrodes.

2. DIRECTED USE

The Kaindl electrode-grinding machine is exclusively for:

- grinding of tungsten carbide welding electrodes with diameter from 1,0 - 4,0 mm
- for grinding of shot plasma electrodes only in connection with the designated use of bushes (option)
- The machine is only designed for occasional grinding of electrodes, in connection with a dust exhaust or industrial vacuum cleaner. A filter **class M** is forced.

For other use than listed here, the machine is not designed for and is regarded as a matter of adverse use!

The directed use includes also reading this operation manual, as well as keeping well containing directions of use - especially the security information. Further it includes that all inspections and maintenance works are carried out during the provided periods.

In case the Kaindl electrode grinding machine is no used as per the intended purpose, as save operation cannot be granted.


For all material- and personal damages arising by not intended use, not the manufacturer, but the user of the Kaindl electrode grinding machine is responsible.

2. SET UP

Environmental conditions for set up: Use the electrode grinding machine only in dry rooms. The WIG 4 is a table machine. Please pay attention that the machine has a solid and safe stand on a plan surface. The place for set up must grant a vibration free running of the machine.

Enviromental temperature:	from 5+ to +50° C
Humidity:	up to 90%, not condensing

3. STRUCTURE

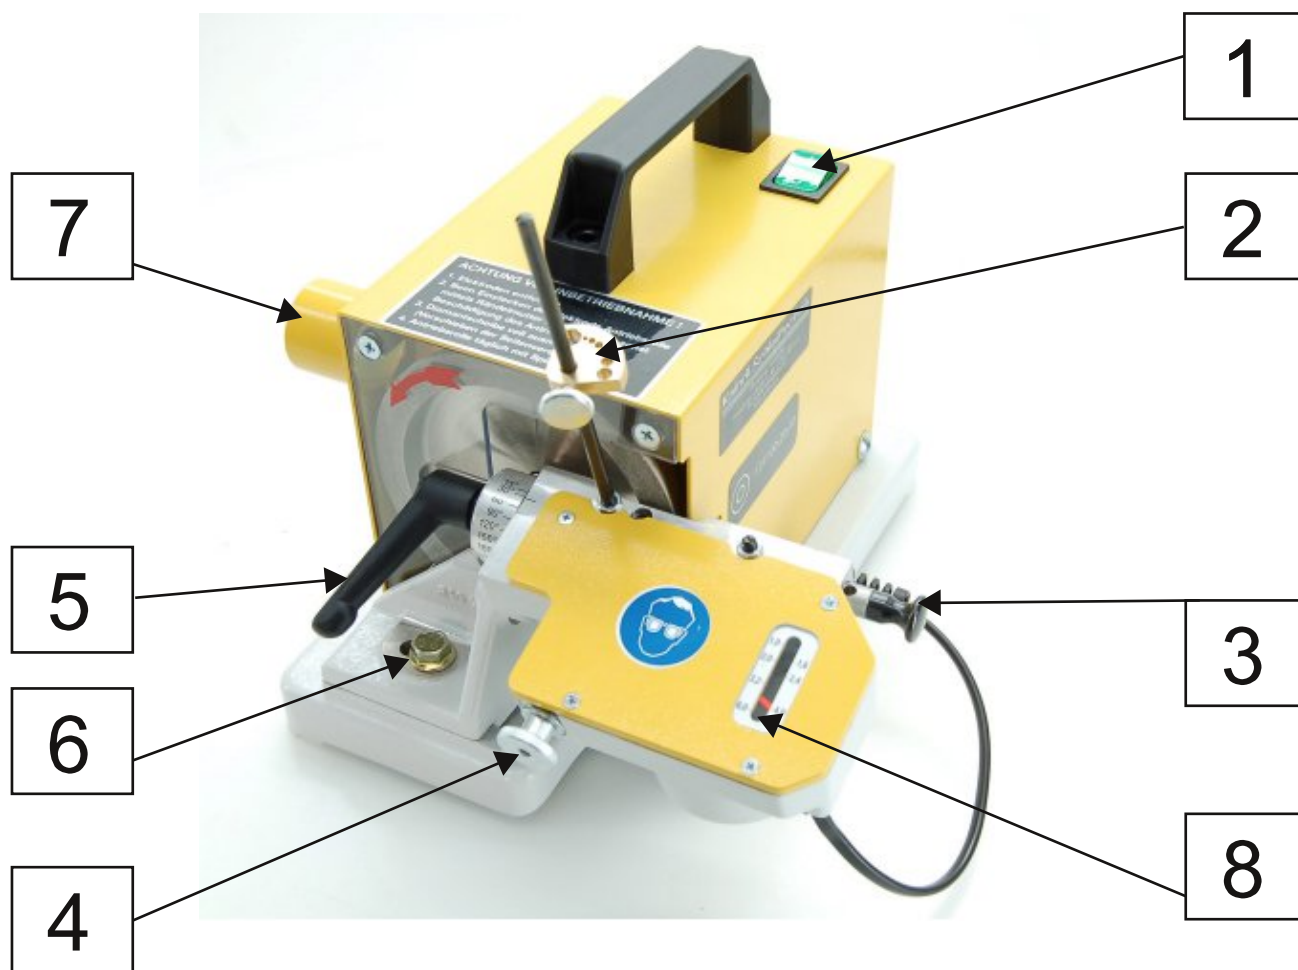

- | | |
|-------------------------------------|------------------------------------|
| (1) Main switch On/Off | (5) Top angle adjustment |
| (2) Guide for electrodes | (6) Horizontal adjustment |
| (3) Adjustment slide for electrodes | (7) Connection for dust exhaust |
| (4) Drive regulation | (8) Display for electrode diameter |

4. TECHNICAL DATA

Top angle	15° - 180°
Electrode-Ø	1,0 / 1,6 / 2,0 / 2,4 / 3,2 / 4,0 mm
Grinding motor	230 Volt / 50 Hz / 0,05 KW
Rotation speed	2720 RPM
Motor for electrode drive	230 Volt / 50 Hz
Rotation speed	375 RPM
Diamond grinding wheels Ø	125 mm
Wight net	6,5 Kg

5. GENERAL SAFETY ADVISE

1. To grant a protection against electric overflow, the machine must be plugged in a socket with protective plug reception.
2. By using an electric extension cable, take care that the lead cables have minimum 1,5 mm² cross-section.
3. We recommend FI protections for the main circuit connection!
4. The protective contact of the plug and coupling must be connected.
5. The specification shown on the type plate of the machine must match with the data of the local power supply main.
6. Check the machine for damages.
7. Vacuum the grinding dust! This is especially recommended by permanent use. By using a industrial vacuum cleaner pay attention to the filter class. only use filters having class "M".
8. **ATTENTION! Before removing or opening the machine, disconnect the main plug!**

6. DUTY OF TAKING CARE BY THE USER

The Kaindl electrode grinding machine has been designed and constructed under consideration of an endangering analysis and careful selection of observed harmonized normes, as well as further technical specifications.


This safety can only be achieved in daily work, when all necessary steps are taken. It is the duty of taking care by the user to plan and control these steps.

The user has to take care that:


- the machine is used as directed (see chapter description)
- the machine is used flawless workable condition, especially that the safety installations are checked.
- the operation manual is always in a readable condition, complete and available near the machine.
- all safety and warning stickers placed on the machine are in a readable condition and have not been removed.

7. START UP AND OPERATION

1. Connect the dust exhaust of industrial vacuum cleaner with **Filter type M** to the pipe (7)
2. Degrease the electrodes before grinding, best with spirit or similar.
3. Adjust the top angle after opening the clamping lever (5), the number on the scale corresponds to the top angle of the finished electrode
4. Switch on the dust exhaust
5. Select the diameter of the electrode with the adjustment slide (3)
6. Turn on the machine with the main switch (1)
7. Adjust the drive control with knob number (4) to the requested diameter (see display)
8. Tuck the electrode through the electrode guide with the selected diameter of boring
9. Turn the drive control (4) anticlockwise until the electrode turns constantly
10. Finish the grinding operations, tear back the drive control (4) and withdraw the electrode simultaneously
11. Switch of the machine with the main switch (1)
12. Switch off the dust exhaust

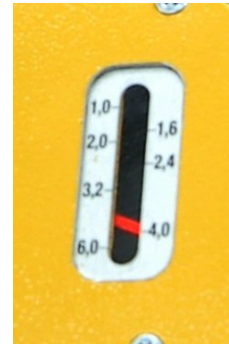

ATTENTION! By using the bushes (sepcial accessory) let project the electrodes around 10 mm !

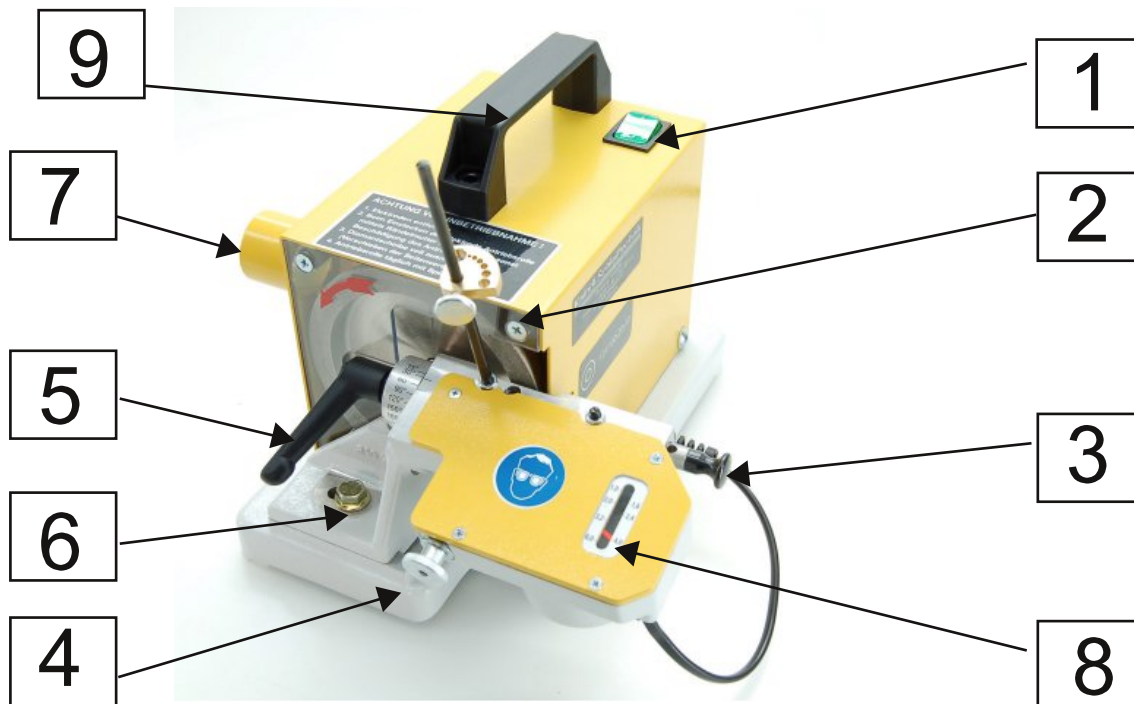


- | | |
|-------------------------------------|--------------------------------------|
| (1) Main switch ON/OFF | (5) Top angle adjustment |
| (2) Guide for electrodes | (6) Horizontal adjustment |
| (3) Adjustment slide for electrodes | (7) Connection pipe for dust exhaust |
| (4) Drive control | (8) Display: diameter of electrode |
| | (9) Carrying handle |


8. CHANGE OF GRINDING WHEEL

For changing the grinding wheel absolutely disconnect from electric current!

1. First loosen the screw which holds the electrode drive with a 13 mm engineers wrench (page 5, No. 6).
2. Open the screws of the transparent plastic cover with a four-way rim wrench.
3. Then tuck the hexagon socket wrench 2,5 mm trough the opening on the right side of the sheet metal casing and open the setscrew. (siehe Bild 1+2).
4. Now you can pull off the diamond wheel.

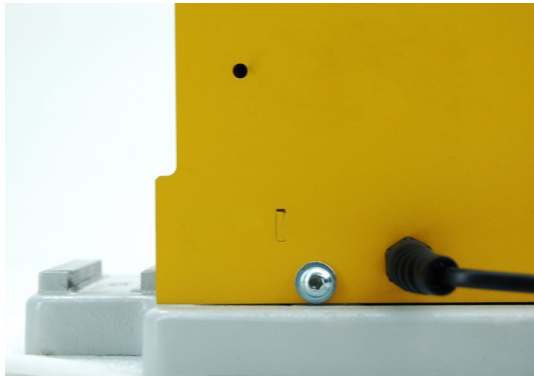

When placing the new diamond wheel on the motor spindle, pay attention that the marking on the motor spindle and on the diamond wheel are in line (see picture). Now mount the other parts on the machine. Adjust the diamond wheel in the way, that at a top angle adjustment of 15° the wheel has a gap of 0,4 mm to the adjustment slide.

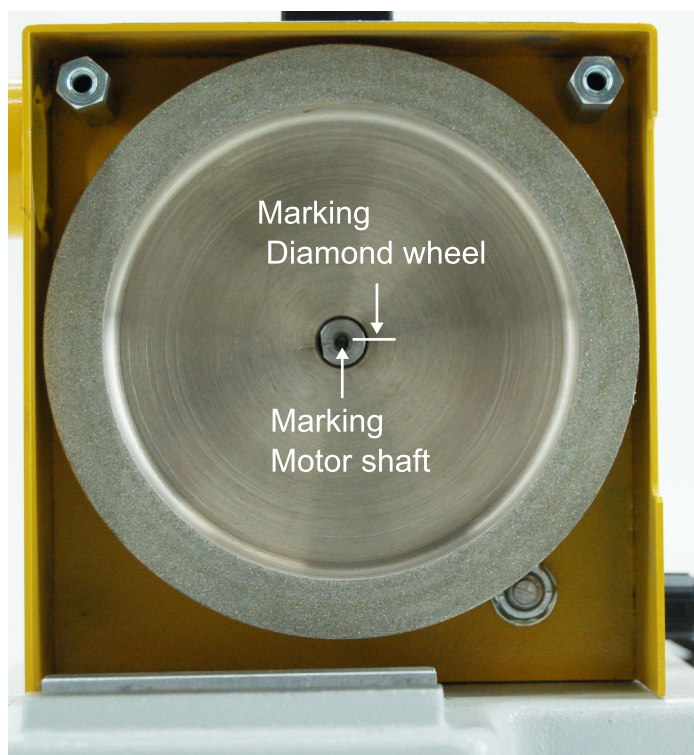

9. MAINTENANCE AND CARE

Under standard working conditions, the Kaindl electrode-grinding machine needs a minimum on maintenance and care.

The observation of some items is essential in order having the machine ready for duty for many years.

1. Check the electric cable and plug occasionally for damaging.
2. Degrease the electrodes before grinding by use of some spirit.
3. Use the full surface of the diamond wheel by occasionally shifting the horizontal adjustment.
4. Clean the drive belt periodical (with spirit).

10. WARRANTY

The warranty is **12 months** from date of shipment and refers to **a one shift work** under condition of a appropriate use of the machine.

The guarantee includes the costs for replacing of defect parts and assembly groups including the required working time. Replacement can also included repaired, used parts and assemblies.

Excluded from any guarantee are:

- Wear parts
- Transport damage
- Damage by improper use of the machine
- Damage by use of force
- Damages and consequential damages caused by breach of the duty of taking care of the user

In case of a warranty claim, we ask you to inform us about the serial number of the machine.

Returns have to be authorized by us, before shipment. We reserve the right to charge you with the transportation cost if the return was not authorized.

Spare parts or replacement parts are transferred absolutely in our ownership.

11. REPAIRS

Returns have to be authorized by us before back-shipment. we reserve the right to charge you with the shipping costs, in case the return was not authorized. Excluded from this are wear parts.

12. SPARE PART LIST

Item	Item No.	Description
1	10745	Diamond grinding wheel D 107 (standard) incl. adaptor
	10744	Diamond grinding wheel D 76 (medium) incl. adaptor
	10743	Diamond grinding wheel D46 (fine) incl. adaptor
2	10760	Knurled screw M4 x 12 mm for guidance bloc
3	10758	Guidance bar M5 x 140 mm for electrode
4	10759	Guidance bloc complete with knurled screw M4 x 12 mm
5	10757	Knurled nut M5 x 20 mm for drive control
6	10762	Locking screw M5 for adjustment slide
7	10765	Casing of electrode drive, painted
8	10764	Motor switch, green lighted, 2 poles 230 V
9	10761	Adjustment slide 1,0 / 1,6 / 2,0 / 2,4 / 3,2 / 4,0 mm
10	10755	Drive belt 3 x 40 mm
11	10750	Synchronous motor for electrode drive 230 Volt / 50 Hz
12	10752	Pulley Ø 19 mm with ball bearing for drive unit
13	10751	Pulley Ø 12 mm for synchronous motor
14	10756	Fork head complete with pulley 19 mm and ball bearing
15	10763	Locking lever M8 for angle adjustment
	10748	Grinding motor, 230 V /50 Hz; 0,05 KW; 2720 Rpm
16		Adjustment pointer for electrode diameter
17	16739	Carrying handle

